



# USER INSTRUCTION MANUAL

---



# ACR-3280

**Alarm Clock Radio  
Instruction Manual  
(Read before proceeding)**



## LOCATION AND DESCRIPTION OF CONTROLS

1. **ON/OFF:** To turn unit on/off or switch FM/AM mode
2. **Set:** Setting the clock (Time)  
**M+:** Memorization (Preset)
3. **HR:** Hour setting  
**T+:** Tuning up
4. **MIN.:** Minute setting  
**T-:** Tuning down
5. **SLEEP:** To fall asleep with the radio  
**SNOOZE:** Interval alarm repetition
6. **v+:** Volume up  
**AL1:** ALARM 1
7. **V-:** Volume down



# USER INSTRUCTION MANUAL

---

## AL2: ALARM 2

8. **ALARM 1** wake to buzzer indicator
9. **ALARM 1** wake to radio indicator
10. **ALARM 2** wake to buzzer indicator
11. **ALARM 2** wake to radio indicator

## POWER SUPPLY

AC: 230V ~ 50 Hz

DC: 2x1.5V, battery type AAA size (not provided) for backup.

For optimal performance, alkaline batteries are recommended. These batteries must be replaced every six months.

1. Insert the plug of power cord into a standard wall outlet.
2. Install the batteries in their compartment. Use only the size and type of batteries specified. Respect the polarity indicated in the compartment. Improper polarity can cause damage to the device. Do not attempt to recharge the batteries, they can catch fire or explode. The batteries need to be replaced when: The volume decreases, or sound is distorted during operation.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## TURNING ON/OFF THE UNIT

In standby mode, press **ON** button once to turn on the unit. Long press **OFF** button again to turn off the unit.

## SETTING THE TIME

1. In standby mode, press and hold **SET** button, the display will flash. Set the time with **HR** hour and/or **MIN** minutes.
2. Press again **SET** button to confirm.

### NOTE:

- If during the adjustment time no key is activated in around 4 seconds, the current display will be automatically stored.

## LISTENING TO THE RADIO

### Selecting band

When the unit is ON, press the **ON/OFF** button repeatedly to select **FM** or **AM** band. The corresponding initial frequency number shows on the display.

### Manual search

1. Adjust the volume by **V- Volume down** or **V+ Volume up** to the desired level.
2. Choose your radio station with **T- Tuning down** or **T+ Tuning up**.

### Automatic search

Press and hold **V- Tuning down** or **V + Tuning up** for a few seconds. The automatic search locates strong stations. A station with a weak signal can be set manually by repeatedly pressing **V- Tuning**



# USER INSTRUCTION MANUAL

---

down or **V+** Tuning up.

## To enhance radio reception ability:

FM: Extend the wire antenna or move to another proper place.

AM: Rotate the unit horizontally for optimum reception or move to another proper place.

## Preset stations

This unit can store 10 FM and 10 AM stations.

## Manual storage:

1. Select a radio station manually or in automatic search.
2. Press and hold the **M+** button for around 1 second. "P 01" blinks on the screen.
3. Press the **M+** button to save it.
4. Repeat steps 1-3 to store other stations.

## Listen to station presets

Press the **M+** button "P 01" blinks on the screen

Press **M+** repeatedly to select your desired channel.

## SETTING THE ALARM AND THE ALARM MODE

1. In standby mode, press **AL 1** button to select the source of wake up to buzzer or radio, the corresponding indicator lights up, and the display blinks.
2. Press **HR.** and/or **MIN.** to set the time of wake up.
3. Press **AL 1** button to confirm.

**Note:** Same procedure applies for Alarm 2 with **ALARM 2** button.

## STOPPING THE ALARM

### 1-Alarm repetition

Press **SNOOZE**. The alarm stops and will sound again 9 minutes later.

### 2-Alarm stop

Press **OFF** or **AL 1** button. The alarm will sound again the next day at the same time.

### 3-Alarm Cancellation

In standby mode, press **AL 1** button repeatedly to cancel the alarm permanently. The alarm indicator lights off.

**Note:** Same procedure applies for Alarm 2 with **ALM 2** button.

## SLEEP FUNCTION

To fall asleep with the radio, press **ON** button once to turn on the unit, then press **SLEEP** button to select 90-80-70-60-50-40-30-20-10 minutes of listening. The unit will automatically turn off after the specified time.

To cancel the sleep function, press the **SLEEP** time to OFF.

## TECHNICAL SPECIFICATIONS



# USER INSTRUCTION MANUAL

POWER SUPPLY: AC 230V~50Hz VDE plug

DC 3V 2x1.5V, battery type AAA size (not provided) for back up.

RADIO FREQUENCY : FM 87.5-108MHz

AM 522-1620kHz

DIMENSION: 116(L) x 92(W) x 45(H) mm

## MORE INFORMATION



**CAUTION:** To reduce the risk of electric shock, do not open the device, there is no party inside for the user. Refer all servicing to qualified personnel.



The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.



The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

## IMPORTANT

- The use of apparatus in moderate climates.
- The Marking plate is located at the bottom of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Do not throw batteries into fire! Respect the environment when disposing of used batteries.
- Batteries should not be exposed to excessive heat such as sunshine, fire or other similar heat source.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be disconnected completely. The socket must not be obstructed and should be easily accessible during intended use.
- Under the influence of fast transient and / or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device



If in the future, you need to get rid of this product, please note that Waste electrical products should not be disposed of with household waste. Recycling facilities exist. Check with your municipality or ask your dealer for advice. (Directive for Waste Electrical and Electronic Equipment)

# CE RoHS