

AKAI

SENIOR PHONE

USER MANUAL

Download PDF manual from :
<http://akai-atd.com/>



Contents

Content.....	3
Phone Buttons.....	4
Startup.....	6
Turn on/ off phone.....	8
Charge the phone.....	9
Emergency calls.....	11
Calling.....	13
Lamp.....	15
Keylock.....	17
Safety instructions.....	18
Used electric devices.....	20
Battery Disposal.....	21

Phone Buttons

1 Right function key

2 Left function key

3 Scroll Up / Down

4 Red Button

5 Green Button

6 Button 0

7 Button #

8 Button *

9 MicroUSB connector

10 2 mm DCjack Connector

11 Lamp


12 Earphone

13 Flashlight Switch Button


Set Up

Inserting the battery and the SIM:

Remove the battery cover on the back of the phone and insert the memory card and SIM card as shown:

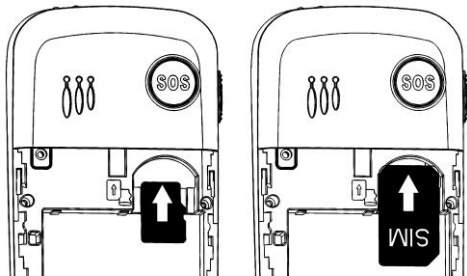

Insert the battery as illustrated. Three metal contacts must be directed towards the bottom of the phone:

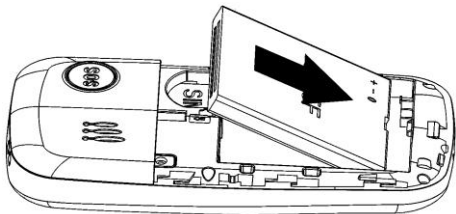

Put back the battery cover. Your phone is now ready for use.

Turning on/ off phone



To switch on, press and hold the red button (4) until the phone powers. (After switching you can be asked

for a PIN code, if enabled PIN protected)

To turn off, press and hold the red button (4) until the phone

powers off.



Before switching, make sure the battery is inserted and the battery is charged.

Charge the phone

Make sure the battery is inserted in the phone. Connect the charger, Charging starts automatically.

Charging power is on or off.

The battery charge status is indicated on the screen of your phone:

battery low	fully charged
	

When fully charged the battery charger, always disconnect from the grid and from the phone.

The phone will warn audible signal and a message on the screen when the battery is nearly depleted. In this case, quickly recharge.

Emergency calls

If you are in danger or if you need help from their loved ones and physician, press SOS button on the back of the phone.

The phone will automatically dial the preset numbers and sends them to the emergency SMS text message including an indication of your position on the map.

ATTENTION! For proper function it is necessary to set up phone numbers for my phone in case of an emergency call. If you do not set, the SOS button will not work properly. For more information, refer to the instruction manual.

Calling

Dialing

Using the phone keypad to enter the desired number and then press the green button (5). When pressed, the phone dials the number.

If you make a wrong entry, simply press the left button (1) and the last digit will be deleted. To erase the entire number, press the red button (4) and the number will be cleared.

Accept / reject call

To answer an incoming call, press the green button (5).

To reject a call, press the red button (4).

By trying to call somebody appears telephone number on the phone display.

If the number is saved

in the contact list to see its name.

(The caller ID may not always be available).

Lamp

Your phone is equipped with a lamp on top of the phone. turn the flashlight on using the power switch (13) on the side of the phone.

The lamp is equipped with highly efficient LED light source type.

**The flashlight can be turned on even if the phone is turned off !!!
It suffices that the charged battery is inserted in the**

Keylock

The phone is equipped with a keypad lock that prevents accidental pressing for example when in the pocket.

To lock, press the left button (2) immediately after the button (8). After a specified period of inactivity, the keypad locks itself.

To unlock the keypad
press the left button Unlock.
(2) immediately after the button
(8)

Safety instructions

- Do not use the phone and where it is forbidden
- Do not use the phone while driving
- Turn off the phone near sensitive medical equipment.

- Turn off your phone in airplane
- Do not use the phone at a petrol station
- Always turn off the phone near explosives.
- Always use original batteries supplied by the manufacturer.
Risk of damage to the phone or even explosion
- **ATTENTION!** Your phone is not waterproof!



Used electric devices

The phone is electrical appliances. This means that it cannot be treated as household waste. Retired phone never

Do not throw away household waste !!!

After use, they must be forwarded to the appropriate collection point for recycling or ensure its ecological disposal.

Failure to comply with these guidelines is illegal.

This product may contain substances harmful to the environment -

proper management is important for its protection.

For more detailed information on how to deal with the used product, contact your dealer or local authority.

Battery Disposal



Retired batteries
and rechargeable
batteries do not
belong in general
household waste !!!